



studio

SETUP GUIDE







studio

SETUP GUIDE

Model PP33L

Notes, Notices, and Cautions



NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

If you purchased a Dell™ n Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

Information in this document is subject to change without notice.

© 2008 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks of these materials used in this text: *Dell*, the *DELL* logo, *Wi-Fi Catcher*, *YOURS IS HERE*, and *DellConnect* are trademarks of Dell Inc.; *Intel*, and *Core* are registered trademarks of Intel Corporation in the United States and/or other countries; AMD, AMD Turion, Athlon, Sempron, ATI Radeon and combinations thereof are trademarks of Advanced Micro Devices, Inc.; *Microsoft*, *Windows*, and *Windows Vista* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.; *Bluetooth* is a registered trademark owned by Bluetooth SIG, Inc. and is used by Dell under license.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Contents

| | | | |
|--|-----------|--|-----------|
| Setting Up Your Studio Laptop | 5 | Display Features | 27 |
| Before Setting Up Your Computer | 5 | Removing and Replacing the Battery | 28 |
| Connect the AC Adapter | 6 | Using the Optical Disc Drive | 29 |
| Check the Wireless Switch | 7 | Software Features | 30 |
| Connect the Network Cable (optional) | 8 | Solving Problems | 32 |
| Press the Power Button | 9 | Network Problems | 32 |
| Windows Vista® Setup | 10 | Power Problems | 33 |
| Connect to the Internet (Optional) | 10 | Memory Problems | 34 |
| Using Your Studio Laptop | 14 | Lockups and Software Problems | 35 |
| Device Status Lights | 14 | Using Support Tools | 37 |
| Right Side Features | 16 | Dell Support Center | 37 |
| Left Side Features | 18 | System Messages | 37 |
| Computer Base and Keyboard Features | 22 | Hardware Troubleshooter | 39 |
| Media Controls | 26 | Dell Diagnostics | 39 |

| | | | |
|--|-----------|----------------------------------|-----------|
| Restoring Your Operating System | 42 | Appendix | 67 |
| System Restore | 42 | Macrovision Product Notice | 67 |
| Dell Factory Image Restore | 43 | Index | 68 |
| Operating System Reinstallation | 45 | | |
| Getting Help | 47 | | |
| Technical Support and Customer Service | 48 | | |
| DellConnect™ | 48 | | |
| Online Services | 48 | | |
| AutoTech Service | 49 | | |
| Product Information | 50 | | |
| Returning Items for Repair Under Warranty or for Credit | 50 | | |
| Before You Call | 51 | | |
| Contacting Dell | 52 | | |
| Finding More Information and Resources | 54 | | |
| Basic Specifications | 56 | | |

Setting Up Your Studio Laptop

This section provides information about setting up your Studio 1536/1537 laptop and connecting peripherals.

Before Setting Up Your Computer

When positioning your computer, ensure that you allow easy access to a power source, adequate ventilation, and a level surface to place your computer.

Restricting airflow around your Studio laptop may cause it to overheat. To prevent overheating ensure that you leave at least 10.2 cm (4 in) at the back of the computer and a minimum of 5.1 cm (2 in) on all other sides. You should never put your computer in an enclosed space, such as a cabinet or drawer when it is powered on.



CAUTION: Do not block, push objects into, or allow dust to accumulate in the air vents. Do not store your Dell™ computer in a low-airflow environment, such as a closed briefcase, while it is running. Restricting the airflow can damage the computer or cause a fire. The computer turns on the fan when the computer gets hot. Fan noise is normal and does not indicate a problem with the fan or the computer.



 
NOTICE: Placing or stacking heavy or sharp objects on the computer may result in permanent damage to the computer.

Setting Up Your Studio Laptop

Connect the AC Adapter

Connect the AC adapter to the computer and then plug it into an electrical outlet or surge protector.

⚠ CAUTION: The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to a power strip or electrical outlet may cause fire or equipment damage.

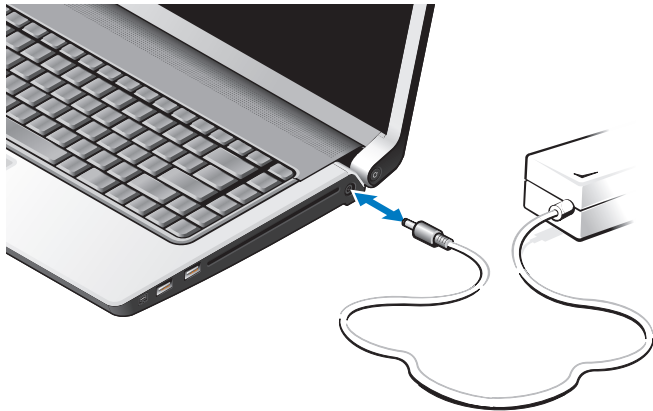

Check the Wireless Switch

If you plan to use wireless connections, make sure the wireless switch is in the “On” position.

Using The Wireless Switch

 
To turn on the wireless switch, slide it from the rear to the front of the computer until it clicks into place.



Setting Up Your Studio Laptop

Connect the Network Cable (optional)

If you plan to use a wired network connection, plug in the network cable.

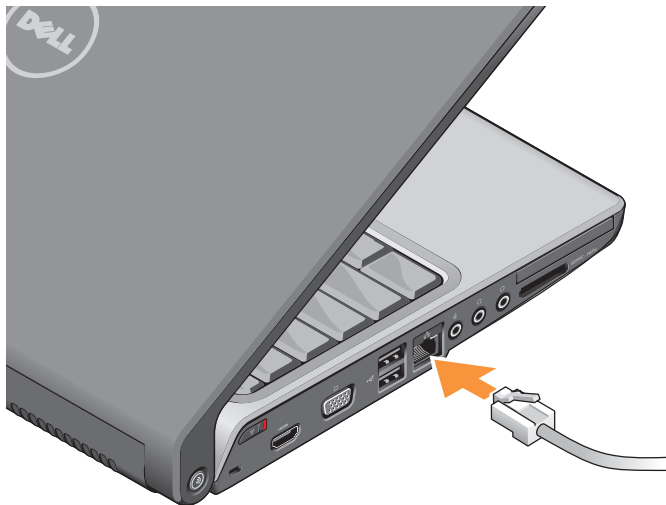

Press the Power Button



Setting Up Your Studio Laptop

Windows Vista® Setup

Your Dell computer is preconfigured with Windows Vista. To set up Windows Vista for the first time, follow the instructions on the screen. These steps are mandatory and may take up to 15 minutes to complete. The screens will take you through several procedures including accepting license agreements, setting preferences and setting up an Internet connection.

- ➔ **NOTICE:** Do not interrupt the operating system's setup process. Doing so may render your computer unusable.

Connect to the Internet (Optional)

- ✍ **NOTE:** ISPs (Internet Service Providers) and ISP offerings vary by country.

To connect to the Internet, you need an external modem or network connection and an Internet service provider (ISP).

- ✍ **NOTE:** If an external USB modem or WLAN adapter is not a part of your original order, you can purchase one from the Dell website at www.dell.com.


Setting Up a Wired Internet Connection

If you are using a dial-up connection, connect the telephone line to the external USB modem (optional) and to the telephone wall connector before you set up your Internet connection. If you are using a DSL or cable/satellite modem connection, contact your ISP or cellular telephone service for setup instructions and see “Setting Up Your Internet Connection” on page 12.

Setting Up a Wireless Connection



Before you can use your wireless Internet connection, you need to connect to your wireless router. To set up your connection to a wireless router:

1. Save and close any open files, and exit any open programs.
2. Click **Start**  → **Connect To**.
3. Follow the instructions on the screen to complete the setup.


Setting Up Your Studio Laptop


Setting Up Your Internet Connection


To set up an Internet connection with a provided ISP desktop shortcut:

1. Save and close any open files, and exit any open programs.
2. Double-click the ISP icon on the Microsoft® Windows® desktop.
3. Follow the instructions on the screen to complete the setup.


If you do not have an ISP icon on your desktop or if you want to set up an Internet connection with a different ISP, perform the steps in the following section.

 **NOTE:** If you cannot connect to the Internet but have successfully connected in the past, the ISP might have a service outage. Contact your ISP to check the service status, or try connecting again later.

 **NOTE:** Have your ISP information ready. If you do not have an ISP, the **Connect to the Internet wizard** can help you get one.

1. Save and close any open files, and exit any open programs.
2. Click **Start**  → **Control Panel**.
3. Under **Network and Internet**, click **Connect to the Internet**.

The **Connect to the Internet** window appears.

 
4. Click either **Broadband (PPPoE)** or **Dial-up**, depending on how you want to connect:
 - a. Choose **Broadband** if you will use a DSL, satellite modem, cable TV modem, or Bluetooth® wireless technology connection.
 - b. Chose **Dial-up** if you will use an optional USB dial-up modem or ISDN.
-  **NOTE:** If you do not know which type of connection to select, click **Help me choose** or contact your ISP.
5. Follow the instructions on the screen and use the setup information provided by your ISP to complete the setup.


Using Your Studio Laptop

Your Studio 1536/1537 has indicators, buttons, and features that provide information at-a-glance and time-saving shortcuts for common tasks.

Device Status Lights

The device status lights located on top of the keyboard provide information for wireless communication.

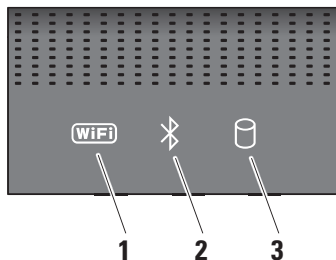


- 1  **WiFi status light** – Turns on when wireless networking is enabled.


Use the wireless switch located at the front, right side of the computer to quickly turn all wireless communication On and Off.

Using the Wireless Switch


To turn on the wireless switch, slide it away from the front of the computer until it clicks into place.




- 2  **Bluetooth® status light**
(optional) – Turns on when a card with Bluetooth wireless technology is enabled.

 
 **NOTE:** The card with Bluetooth wireless technology is an optional feature.






To turn off Bluetooth wireless, right-click the bluetooth icon in the notification area of your desktop, and click **Disable Bluetooth Radio** or use the wireless switch.

- 3  **Hard drive activity light** – Turns on when the computer reads or writes data. A flashing light indicates hard drive activity.

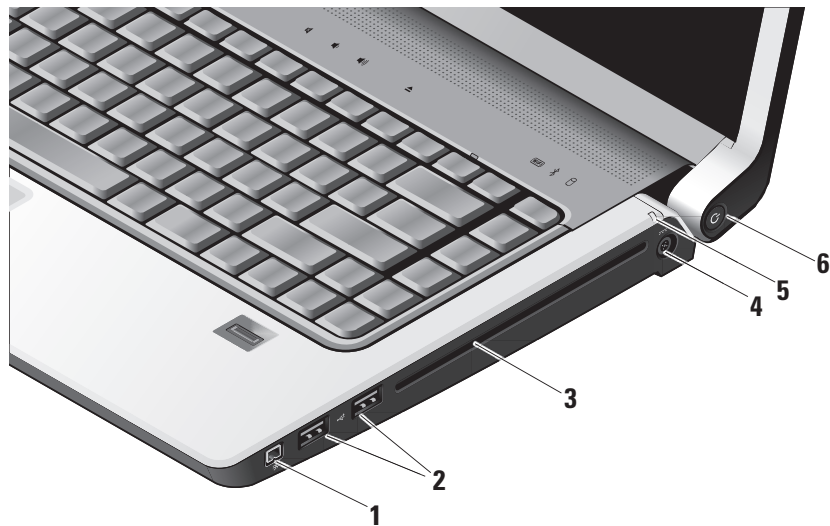 
 **NOTE:** To avoid loss of data, never turn off the computer while the hard drive activity light is flashing.



Right Side Features



 
- 1  **IEEE 1394 connector** – Connects to a high-speed serial multimedia devices, such as digital video cameras.
- 2  **USB 2.0 connectors (2)** – Connects to a USB device, such as a mouse, keyboard, printer, external drive, or MP3 player.
- 3 **Optical Disc Drive** – Plays or burns only standard-size and shape (12 cm) CDs, and DVDs. Ensure that the side with print or writing is facing upward when inserting discs. For more information on using the optical disk drive, see “Using the Optical Disk Drive” on page 29.
- 4  **AC adapter connector** – Connects to the AC adapter to power on the computer and charge the battery when the computer is not in use.
- 5  **Battery status light** – Indicates the battery charging state:
 - Off – fully charged or the computer is turned off.
 - Solid white – charging.
 - Solid amber – charge is low.
 - Blinking amber – charge is critically low and you should either plug in the AC adapter or save and close your open documents and applications.
- 6  **Power button and light** – Turns the power on or off when pressed. The light in the button indicates the power state:
 - Blinking white – in sleep state.
 - Solid white – in power-on state.
 - Blinking amber – there may be a problem with the system board.
 - Solid amber – the system board cannot start initialization. There may be an issue with either the system board or power supply.

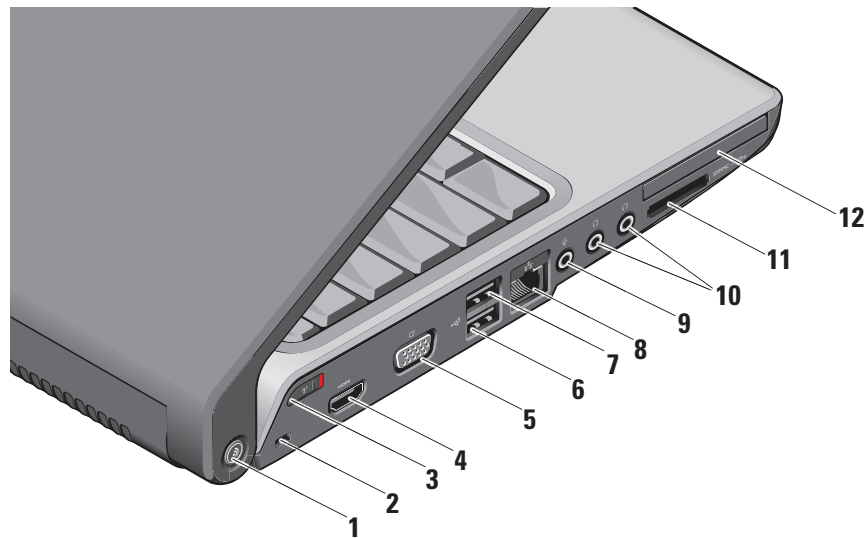
Left Side Features




- 1  **DELL Wi-Fi Catcher™ Network Locator button** – Press this button for a few seconds to scan for wireless networks in your vicinity. The light in the center of this button indicates the searching state:
- Blinking white indicates searching.
 - Solid white for 10 seconds then off indicates that a network was found.
 - Blinking white 10 times then off indicates that no network was found.
- 2 **Security cable slot** – Attaches a commercially available antitheft device to the computer.
-  **NOTE:** Before you buy an antitheft device, ensure that it works with the security cable slot on your computer.


 

 



- 3  **Wireless On/Off switch** – Use this switch to rapidly turn all wireless devices Off or On such as WLAN cards and internal cards with Bluetooth wireless technology. The wireless switch may be in the Off position when your computer is shipped to you. To turn the switch On, slide the switch toward the front of the computer until it clicks into place.





-  **NOTE:** This switch can be deactivated through Dell QuickSet or the BIOS (system setup program).


- 4  **HDMI Connector** – HDMI (High-Definition Multimedia Interface) connector carries an uncompressed all digital signal to produce hi-definition video and audio.

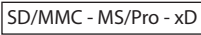Using Your Studio Laptop

 
- 5  **VGA connector** – Connects to a monitor or projector.
- 6  **USB 2.0 connectors** – Connects to USB devices, such as a mouse, keyboard, printer, external drive, or MP3 player.
- 7  **eSATA Connector** – Connect eSATA compatible storage devices, such as external hard disk drives or optical drives.
- 8  **Network connector** – If you are using a cabled network signal, this port connects your computer to a network or broadband device.
- 9  **Audio In/ Microphone connector** – Connects to a microphone or inputs signal for use with audio programs.
- 10  **Audio Out/ Headphone connectors (2)** – Connects one or two pairs of headphones, or sends audio to a powered speaker or sound system. The audio signal is the same for both connectors.
- 11  **8-in-1 Media card reader** – Provides a fast and convenient way to view and share digital photos, music, videos, and documents stored on the following digital memory cards:
 - Secure digital (SD) memory card
 - Secure Digital Input Output (SDIO) card
 - Multi Media Card (MMC)
 - Memory Stick
 - Memory Stick PRO
 - xD-Picture Card (type - M and type - H)
 - Hi Speed-SD
 - Hi Density-SD

 **NOTE:** Your computer ships with a plastic *blank* installed in the media card slot. Blanks protect unused slots from dust and other particles. Save the blank for use when no media card is installed in the slot; blanks from other computers may not fit your computer.


12  **ExpressCard slot** – Supports one ExpressCard.

 **NOTE:** Your computer ships with a plastic *blank* installed in the ExpressCard slot. Blanks protect unused slots from dust and other particles. Save the blank for use when no ExpressCard is installed in the slot; blanks from other computers may not fit your computer.

Computer Base and Keyboard Features

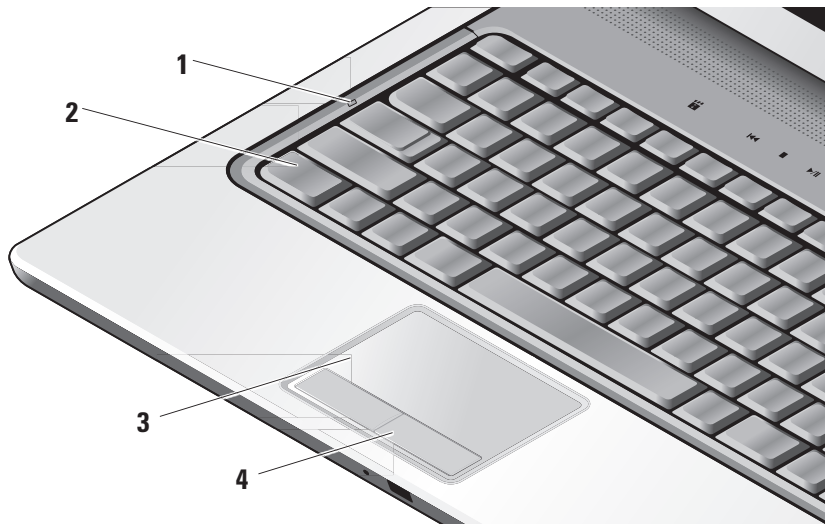

1 Caps Lock light – Turns on when using the Caps Lock key.

2 Keyboard/ Backlit Keyboard (optional) – If you have purchased the optional backlit keyboard, the right-arrow key will have the backlit keyboard icon  on it. The optional backlit keyboard provides visibility in dark environments by illuminating all symbols on the keys. The settings for this keyboard can be personalized by using Dell QuickSet. For more information on keyboard, see the *Dell Technology Guide*.



Backlit Keyboard Brightness

Settings – Press <Fn> + right-arrow key to toggle between the three lighting states (in the given order).

The three lighting states are:

- full keyboard/touch pad brightness
- half keyboard/touch pad brightness
- no lighting

3 Touch pad – Provides the functionality of a mouse to move the cursor, drag or move selected items, and left-click by tapping the surface. It supports circular scrolling and zoom.

To change the circular scrolling and zoom settings, double click the *Dell Touch pad* icon in the notification area of your desktop. In the **Scrolling** tab, you can enable or disable scrolling or circular scrolling, choose the scroll zone width, and scroll speed.

In the **Gestures** tab, you can enable or disable one finger zoom (zoom in and out moving the finger upward or downward) or the pinch zoom (zoom in and out by spreading two fingers or by bringing two fingers together).

4 Touch pad buttons – Provide left- and right-click functions those on like a mouse.

Using Your Studio Laptop



- 5 Analog Microphone** – If you do not have the optional built-in camera with dual microphones, this single microphone is used for conferencing and chat.
- 6 Consumer IR** – Allows certain software applications to be controlled by the Dell Travel Remote (an optional device that can be stored in the ExpressCard slot when not in use).
- 7 Fingerprint reader (optional)** – Helps to keep your computer secure. When you slide your finger over the reader, it uses your unique fingerprint to authenticate your user identity (by automating the entry of user names and passwords) using *DigitalPersona Personal* software. To activate and use *Digital Persona Personal*, click **Start** → **Programs** → **DigitalPersona Personal**.
- 8 Num Lock light** – Turns on when using the Num Lock key.

Using Your Studio Laptop

Media Controls

To use the media controls, lightly touch the symbol and then release. The control symbol will shine for 2 seconds to confirm your selection then fade away.



Launch Dell MediaDirect



Play the previous track or chapter



Stop



Play or pause



Play the next track or chapter



Mute the sound



Turn down the volume



 
Turn up the volume



Eject the disc

Display Features

The display panel holds an optional camera and accompanying dual microphones.

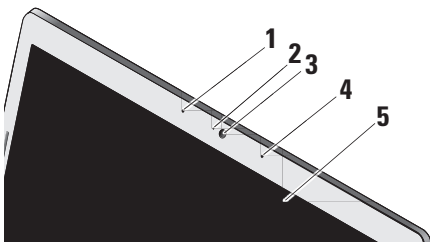

1 Left digital array microphone (optional)

– Combines with the right digital array microphone to provide high quality sound for video chatting and voice recording.

2 Camera activity light (optional)

– Indicates when the camera is on or off. Based on selections you made when purchasing your computer, your computer may not include a camera.

3 Camera (optional) – Built-in camera for video capture, conferencing, and chat. Based on the selections you made when purchasing your computer, your computer may not include a camera.

FastAccess facial recognition (optional)

– Helps to keep your Dell™ computer secure. This advanced facial recognition software learns your face and minimizes the need for you to use login passwords.

For more information, click **Start** →

Programs → **FastAccess Facial Recognition**.

4 Right digital array microphone (optional)

– Combines with the left digital array microphone to provide high quality sound for video chatting and voice recording.

5 Display – Your display can vary based on selections you made when purchasing your computer. For more information about displays, see the *Dell Technology Guide*.

Removing and Replacing the Battery

⚠ CAUTION: Using an incompatible battery may increase the risk of fire or explosion. This computer should only use a battery purchased from Dell. Do not use batteries from other computers.

 
⚠ CAUTION: Before removing the battery, shut down the computer, and remove external cables (including the AC adapter).

- 1 Battery
- 2 Battery charge/health gauge
- 3 Battery release latch

To remove the battery:


1. Shut down the computer and turn it over.
2. Slide the battery release latch until it clicks into place.
3. Slide the battery out.

To replace the battery, slide it into the bay until it clicks into place.

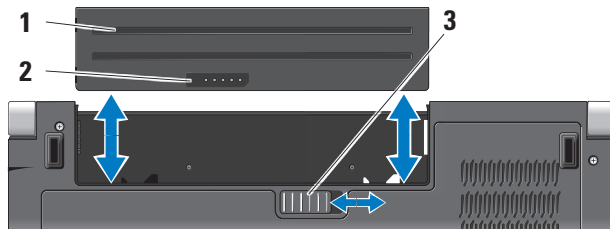

Using the Optical Disc Drive

 
- ➔ **NOTICE:** Do not use non-standard-size or shape discs (including mini-CDs and mini-DVDs) or you will damage the drive.

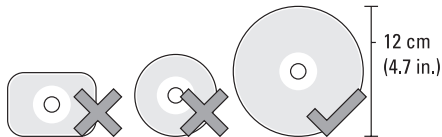


- ✍ **NOTE:** Do not move the computer while playing or recording CDs and DVDs.

Place the disc in the center of the disc slot, with the label facing outwards and gently push the disc into the slot. The drive will automatically pull the disc in and begin reading its content.



To eject a disc from the drive, gently touch the eject control button . The control will flash to confirm a few seconds before ejecting the disc.

Software Features

 **NOTE:** For more information about the features described in this section, see the *Dell Technology Guide* on your hard drive or on the Dell Support website at support.dell.com.

Productivity and Communication

You can use your computer to create presentations, brochures, greeting cards, fliers, and spreadsheets. You can also edit and view digital photographs and images. Check your purchase order for software installed on your computer.

After connecting to the Internet, you can access websites, setup an e-mail account, upload and download files, and so on.

Entertainment and Multimedia

You can use your computer to watch videos, play games, create your own CDs, listen to music and internet radio stations. Your optical disc drive may support multiple disc media

formats including CDs, Blu-ray discs (if selected at the time of purchase), and DVDs.

You can download or copy pictures and video files from portable devices, such as digital cameras and cell phones. Optional software applications enable you to organize and create music and video files that can be recorded to disc, saved on portable products such as MP3 players and handheld entertainment devices, or played and viewed directly on connected TVs, projectors, and home theater equipment.

Customizing the Desktop

You can customize your desktop to change the appearance, resolution, wallpaper, screensaver, and so on by accessing the **Personalize appearance and sounds** window.

To access the display properties window:

1. Right-click an open area of the desktop.
2. Click **Personalize**, to open the **Personalize appearance and sounds** window and learn more about your customization options.


Customizing Your Energy Settings

You can use the power options in your operating system to configure the power settings on your computer. Microsoft® Windows Vista® shipped with Dell computer provides three default options:

- **Dell Recommended** — This power option offers full performance when you need it and saves power during periods of inactivity.
- **Power saver** — This power option saves power on your computer by reducing system performance to maximize the life of the computer and by reducing the amount of energy consumed by your computer over its lifetime.
- **High performance** — This power option provides the highest level of system performance on your computer by adapting processor speed to your activity and by maximizing system performance.

Backing Up Your Data

It is recommended that you periodically back up files and folders on your computer. To back up files:

1. Click **Start**  → **Control Panel** → **System and Maintenance** → **Welcome Center** → **Transfer files and settings**.
2. Click **Back up files** or **Back up computer**.
3. Click **Continue on Your User Account Control** dialog box and follow the instructions in the Back up Files wizard. This section provides troubleshooting information for your computer. If you can not solve your problem using the following guidelines, see “Using Support Tools” on page 37 or “Contacting Dell” on page 52.



CAUTION: Only trained service personnel should remove the computer cover. See the *Service Manual* on the Dell Support website at support.dell.com for advanced service and troubleshooting instructions.

Solving Problems

Network Problems

Wireless Connections


If the network connection is lost

— The wireless switch may be off. To turn on the wireless switch, slide it from the rear to the front of the computer until it clicks into place.



— The wireless router is offline or wireless has been disabled on the computer.

- Check your wireless router to ensure it is powered on and connected to your data source (cable modem or network hub).
- Re-establish your connection to the wireless router:
 - a. Save and close any open files, and exit any open programs.

- a. Click **Start**  → **Connect To**.
- c. Follow the instructions on the screen to complete the setup.

Wired Connections


If the network connection is lost — The cable is loose or damaged.

- Check the cable to ensure it is plugged in and not damaged.

The link integrity light on the integrated network connector lets you verify that your connection is working and provides information on the status:

- **Green** — A good connection exists between a 10-Mbps network and the computer.
- **Orange** — A good connection exists between a 100-Mbps network and the computer.

- Yellow — A good connection exists between a 1000-Mbps network and the computer.
- Off — The computer is not detecting a physical connection to the network.

 **NOTE:** The link integrity light on the network connector is only for the wired cable connection. The link integrity light does not provide status for wireless connections.

Power Problems

If the power light is off — The computer is either turned off or is not receiving power.

- Reseat the power cable into both the power connector on the computer and the electrical outlet.
- If the computer is plugged into a power strip, ensure that the power strip is plugged into an electrical outlet and that the power strip is turned on. Also bypass power protection devices, power strips, and power extension cables to verify that the computer turns on properly.

- Ensure that the electrical outlet is working by testing it with another device, such as a lamp.
- Check the AC adapter cable connections. If the AC adapter has a light, ensure that the light on the AC adapter is on.

If the power light is solid white and the computer is not responding — The display may not be responding. Press the power button until the computer turns off and then turn it back on. If the problem persists, see the *Dell Technology Guide* on the Dell Support website at support.dell.com.

If the power light is blinking white — The computer is in standby mode. Press a key on the keyboard, move the pointer using the touch pad or a connected mouse, or press the power button to resume normal operation.

If the power light is solid amber — The computer has a power problem or an internal device malfunction. For assistance contact Dell, see “Contacting Dell” on page 52.

Solving Problems

If the power light is blinking amber — The computer is receiving electrical power, but a device might be malfunctioning or incorrectly installed. You may have to remove and then reinstall the memory modules (for information on removing and replacing memory modules, see the *Service Manual* on the Dell Support website at support.dell.com).

If you encounter interference that hinders reception on your computer — An unwanted signal is creating interference by interrupting or blocking other signals. Some possible causes of interference are:

- Power, keyboard, and mouse extension cables.
- Too many devices connected to a power strip.
- Multiple power strips connected to the same electrical outlet.

Memory Problems

If you receive an insufficient memory message—

- Save and close any open files and exit any open programs you are not using to see if that resolves the problem.
- See the software documentation for minimum memory requirements. If necessary, install additional memory (See the *Service Manual* on the Dell Support website at support.dell.com).
- Reseat the memory modules (See the *Service Manual* on the Dell Support website at support.dell.com) to ensure that your computer is successfully communicating with the memory.

If you experience other memory problems —

- Ensure that you are following the memory installation guidelines (see the *Service Manual* on the Dell Support website at support.dell.com).

- Check if the memory module is compatible with your computer. Your computer supports DDR2 memory. For more information about the type of memory supported by your computer, see “Basic Specifications” on page 56.
- Run the Dell Diagnostics (see “Dell Diagnostics” on page 39).
- Reseat the memory modules (see the *Service Manual* on the Dell Support website at support.dell.com) to ensure that your computer is successfully communicating with the memory.


Lockups and Software Problems

If the computer does not start up — Ensure that the power cable is firmly connected to the computer and to the electrical outlet.


If a program stops responding — End the program:

1. Press <Ctrl><Shift><Esc> simultaneously.
2. Click **Applications**.
3. Click the program that is no longer responding
4. Click **End Task**.

If a program crashes repeatedly — Check the software documentation. If necessary, uninstall and then reinstall the program.

 **NOTE:** Software usually includes installation instructions in its documentation or on the CD.

If the computer stops responding —


 **NOTICE:** You might lose data if you are unable to perform an operating system shutdown.

Turn the computer off. If you are unable to get a response by pressing a key on your keyboard or moving your mouse, press the power button for at least 8 to 10 seconds until the computer turns off and then restart your computer.

Solving Problems

If a program is designed for an earlier Microsoft® Windows® operating system —


Run the Program Compatibility Wizard. The Program Compatibility Wizard configures a program so that it runs in an environment similar to non-Windows Vista operating system environments.

1. Click **Start**  → **Control Panel** → **Programs** → **Use an older program with this version of Windows**.
2. In the welcome screen, click **Next**.
3. Follow the instructions on the screen.

If a solid blue screen appears — Turn the computer off. If you are unable to get a response by pressing a key on your keyboard or moving your pointer or mouse, press and hold the power button for at least 8 to 10 seconds until the computer turns off and then restart your computer.

If you have other software problems —

- Back up your files immediately.
- Use a virus-scanning program to check the hard drive or CDs.


- Save and close any open files or programs and shut down your computer through the **Start**  menu.
- Check the software documentation or contact the software manufacturer for troubleshooting information:
 - Ensure that the program is compatible with the operating system installed on your computer.
 - Ensure that your computer meets the minimum hardware requirements needed to run the software. See the software documentation for information.
 - Ensure that the program is installed and configured properly.
 - Verify that the device drivers do not conflict with the program.
 - If necessary, uninstall and then reinstall the program Dell Support Center.

Using Support Tools

Dell Support Center

The Dell Support Center helps you find the service, support, and system-specific information you need. For more information about Dell Support Center and available support tools, click the **Services** tab at support.dell.com.



Click the  icon in the taskbar to run the application. The home page provides links to access:

- Self Help (Troubleshooting, Security, System Performance, Network/Internet, Backup/Recovery, and Windows Vista)
- Alerts (technical support alerts relevant to your computer)
- Assistance from Dell (Technical Support with DellConnect™, Customer Service, Training and Tutorials, How-To Help with Dell on Call, and Online Scan with PCCheckUp)

- About Your System (System Documentation, Warranty Information, System Information, Upgrades & Accessories)

The top of the Dell Support Center home page displays your system's model number along with its service tag and express service code.

For more information about the Dell Support Center, see the *Dell Technology Guide* on your hard drive or on the Dell Support website at support.dell.com.

System Messages

If your computer has an issue or error, it may display a System Message that will help you identify the cause and action needed to resolve the issue.



NOTE: If the message you received is not listed in the following examples, see the documentation for either the operating system or the program that was

Using Support Tools

running when the message appeared. Alternatively you could see the *Dell Technology Guide in your hard disk* or on the Dell Support website at **support.dell.com** or see “Contacting Dell” on page 52 for assistance.

Alert! Previous attempts at booting this system have failed at checkpoint [nnnn]. For help in resolving this problem, please note this checkpoint and contact Dell Technical Support —

The computer failed to complete the boot routine three consecutive times for the same error see “Contacting Dell” on page 52 for assistance.

CMOS checksum error — Possible motherboard failure or RTC battery low. Replace the battery. See the *Service Manual* on the Dell Support website at **support.dell.com** or see “Contacting Dell” on page 52 for assistance.

CPU fan failure — CPU fan has failed. Replace the CPU fan. See the *Service Manual* on the Dell Support website at **support.dell.com**.

Hard-disk drive failure — Possible hard disk drive failure during POST, see “Contacting Dell” on page 52 for assistance.

Hard-disk drive read failure — Possible hard disk drive failure during HDD boot test see “Contacting Dell” on page 52 for assistance.

Keyboard failure — Keyboard failure or loose cable.

No boot device available — No bootable partition on hard disk drive, the hard disk drive cable is loose, or no bootable device exists.

- If the hard drive is your boot device, ensure that the cables are connected and that the drive is installed properly and partitioned as a boot device.
- Enter system setup and ensure that the boot sequence information is correct (see the *Dell Technology Guide* on the Dell Support website at **support.dell.com**).

No timer tick interrupt — A chip on the system board might be malfunctioning or motherboard failure (see “Contacting Dell” on page 52 for assistance).


USB over current error — Disconnect the USB device. Your USB device needs more power for it to function properly. Use an external power source to connect the USB device, or if your device has two USB cables, connect both of them.

NOTICE - Hard Drive SELF MONITORING SYSTEM has reported that a parameter has exceeded its normal operating range. Dell recommends that you back up your data regularly. A parameter out of range may or may not indicate a potential hard drive problem — S.M.A.R.T error, possible hard disk drive failure. This feature can be enabled or disabled in the BIOS setup (see “Contacting Dell” on page 52 for assistance).

Hardware Troubleshooter

If a device is either not detected during the operating system setup or is detected but incorrectly configured, you can use the **Hardware Troubleshooter** to resolve the incompatibility.

To start the Hardware Troubleshooter:

1. Click **Start**  → **Help and Support**.
2. Type `hardware troubleshooter` in the search field and press <Enter> to start the search.
3. In the search results, select the option that best describes the problem and follow the remaining troubleshooting steps.

Dell Diagnostics

If you experience a problem with your computer, perform the checks in “Lockups and Software Problems” on page 56 and run the Dell Diagnostics before you contact Dell for technical assistance.

Using Support Tools

It is recommended that you print these procedures before you begin.

➔ **NOTICE:** Dell Diagnostics works only on Dell computers.

✍ **NOTE:** The *Drivers and Utilities* media is optional and may not ship with your computer.

See the System Setup section in the *Dell Technology Guide* to review your computer's configuration information, and ensure that the device that you want to test displays in the system setup program and is active.

Start the Dell Diagnostics from your hard drive or from the *Drivers and Utilities* media.



Starting Dell Diagnostics From Your Hard Drive

The Dell Diagnostics is located on a hidden diagnostic utility partition on your hard drive.

✍ **NOTE:** If your computer cannot display a screen image, see "Contacting Dell" on page 52.

1. Ensure that the computer is connected to an electrical outlet that is known to be working properly.
2. Turn on (or restart) your computer.
3. When the DELL™ logo appears, press <F12> immediately. Select **Diagnostics** from the boot menu and press <Enter>.✍ **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.
- ✍ **NOTE:** If you see a message stating that no diagnostics utility partition has been found, run the Dell Diagnostics from the *Drivers and Utilities* media.
4. Press any key to start the Dell Diagnostics from the diagnostics utility partition on your hard drive.

Starting Dell Diagnostics From the Drivers and Utilities Media

1. Insert the *Drivers and Utilities* media.
2. Shut down and restart the computer.
When the DELL logo appears, press <F12> immediately.
 **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.
 **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.
3. When the boot device list appears, highlight **CD/DVD/CD-RW** and press <Enter>.
4. Select the **Boot from CD-ROM** option from the menu that appears and press <Enter>.
5. Type 1 to start the CD menu and press <Enter> to proceed.
6. Select **Run the 32 Bit Dell Diagnostics** from the numbered list. If multiple versions are listed, select the version appropriate for your computer.
7. When the Dell Diagnostics **Main Menu** appears, select the test you want to run.

Restoring Your Operating System

You can restore your operating system in the following ways:

- System Restore returns your computer to an earlier operating state without affecting data files. Use System Restore as the first solution for restoring your operating system and preserving data files.
- Dell Factory Image Restore returns your hard drive to the operating state it was in when you purchased the computer. This procedure permanently delete all data on the hard drive and remove any programs installed after you received the computer. Use Dell Factory Image Restore only if System Restore did not resolve your operating system problem.
- If you received an Operating System disc with your computer, you can use it to restore your operating system. However, using the Operating System disc also deletes all data

on the hard drive. Use the disc only if System Restore did not resolve your operating system problem.


System Restore


The Windows operating systems provide a System Restore option which allows you to return your computer to an earlier operating state (without affecting data files) if changes to the hardware, software, or other system settings have left the computer in an undesirable operating state. Any changes that System Restore makes to your computer are completely reversible.

➡ **NOTICE:** Make regular backups of your data files. System Restore does not monitor your data files or recover them.

✍ **NOTE:** The procedures in this document were written for the Windows default view, so they may not apply if you set your Dell™ computer to the Windows Classic view.

Starting System Restore


1. Click **Start** .
2. In the **Start Search** box, type `System Restore` and press <Enter>.


 **NOTE:** The **User Account Control** window may appear. If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

3. Click **Next** and follow the remaining prompts on the screen.


In the event that System Restore did not resolve the issue, you may undo the last system restore.


Undoing the Last System Restore

 **NOTE:** Before you undo the last system restore, save and close all open files and exit any open programs. Do not alter, open, or delete any files or programs until the system restoration is complete.

1. Click **Start** .
2. In the **Start Search** box, type `System Restore` and press <Enter>.
3. Click **Undo my last restoration** and click **Next**.

Dell Factory Image Restore

 **NOTICE:** Using Dell Factory Image Restore permanently deletes all data on the hard drive and removes any programs or drivers installed after you received your computer. If possible, back up the data before using these options. Use Dell Factory Image Restore only if System Restore did not resolve your operating system problem.



 **NOTE:** Dell Factory Image Restore may not be available in certain countries or on certain computers.

Use Dell Factory Image Restore only as the last method to restore your operating system. These options restore your hard drive to the

Restoring Your Operating System

operating state it was in when you purchased the computer. Any programs or files added since you received your computer—including data files—are permanently deleted from the hard drive. Data files include documents, spreadsheets, e-mail messages, digital photos, music files, and so on. If possible, back up all data before using Factory Image Restore.

Dell Factory Image Restore

1. Turn on the computer. When the Dell logo appears, press <F8> several times to access the **Vista Advanced Boot Options** Window.
2. Select **Repair Your Computer**.
3. The **System Recovery Options** window appears.
4. Select a keyboard layout and click **Next**.
5. To access the recovery options, log on as a local user. To access the command prompt, type `administrator` in the **User name** field, then click **OK**.
6. Click **Dell Factory Image Restore**. The **Dell Factory Image Restore** welcome screen appears.
 **NOTE:** Depending upon your configuration, you may need to select **Dell Factory Tools**, then **Dell Factory Image Restore**.
7. Click **Next**. The **Confirm Data Deletion** screen appears.
 **NOTICE:** If you do not want to proceed with Factory Image Restore, click **Cancel**.
8. Click the checkbox to confirm that you want to continue reformatting the hard drive and restoring the system software to the factory condition, then click **Next**.


The restore process begins and may take five or more minutes to complete. A message appears when the operating system and factory-installed applications have been restored to factory condition.

9. Click **Finish** to reboot the system.

Operating System Reinstallation


Before you Begin

If you are considering reinstalling the Windows operating system to correct a problem with a newly installed driver, first try using Windows Device Driver Rollback. If Device Driver Rollback does not resolve the problem, then use System Restore to return your operating system to the operating state it was in before you installed the new device driver. See “Using Microsoft Windows System Restore” on page 42.

 **NOTICE:** Before performing the installation, back up all data files on your primary hard drive. For conventional hard drive configurations, the primary hard drive is the first drive detected by the computer.

To reinstall Windows, you need the following

- *Dell Operating System* media
- *Dell Drivers and Utilities* media


 **NOTE:** The *Dell Drivers and Utilities* media contains drivers that were installed during the assembly of the computer. Use the *Dell Drivers and Utilities* media to load any required drivers. Depending on the region from which you ordered your computer, or whether you requested the media, the *Dell Drivers and Utilities* media and *Operating System* media may not ship with your computer.


Restoring Your Operating System

Reinstalling Windows Vista

The reinstallation process can take 1 to 2 hours to complete. After you reinstall the operating system, you must also reinstall the device drivers, virus protection program, and other software.

1. Save and close any open files and exit any open programs.
2. Insert the *Operating System* disc.
3. Click **Exit** if the **Install Windows** message appears.
4. Restart the computer.
5. When the DELL logo appears, press <F12> immediately.

 **NOTE:** If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft® Windows® desktop; then, shut down your computer and try again.


 **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.


6. When the boot device list appears, highlight **CD/DVD/CD-RW Drive** and press <Enter>.
7. Press any key to **Boot from CD-ROM**. Follow the instructions on the screen to complete the installation.

Getting Help


If you experience a problem with your computer, you can complete the following steps to diagnose and troubleshoot the problem:

1. See “Solving Problems” on page 32 for information and procedures that pertain to the problem your computer is experiencing.
2. See “Dell Diagnostics” on page 39 for procedures on how to run Dell Diagnostics.
3. Fill out the “Diagnostic Checklist” on page 51.
4. Use Dell’s extensive suite of online services available at Dell Support (support.dell.com) for help with installation and troubleshooting procedures. See “Online Services” on page 48 for a more extensive list of Dell Support online.
5. If the preceding steps have not resolved the problem, see “Contacting Dell” on page 52.

 **NOTE:** Call Dell Support from a telephone near or at the computer so that the support staff can assist you with any necessary procedures.

 **NOTE:** Dell’s Express Service Code system may not be available in all countries.

When prompted by Dell’s automated telephone system, enter your Express Service Code to route the call directly to the proper support personnel. If you do not have an Express Service Code, open the **Dell Accessories** folder, double-click the **Express Service Code** icon, and follow the directions.

 **NOTE:** Some of the services are not always available in all locations outside the continental U.S. Call your local Dell representative for information on availability.

Technical Support and Customer Service

Dell's support service is available to answer your questions about Dell hardware. Our support staff use computer-based diagnostics to provide fast, accurate answers.

To contact Dell's support service, see "Before You Call" on page 51 and then see the contact information for your region or go to **support.dell.com**.

DellConnect™

DellConnect is a simple online access tool that allows a Dell service and support associate to access your computer through a broadband connection, diagnose your problem and repair it all under your supervision. For more information, go to **support.dell.com** and click **DellConnect**.

Online Services

You can learn about Dell products and services on the following websites:

- **www.dell.com**
- **www.dell.com/ap** (Asian/Pacific countries only)
- **www.dell.com/jp** (Japan only)
- **www.euro.dell.com** (Europe only)
- **www.dell.com/la** (Latin American and Caribbean countries)
- **www.dell.ca** (Canada only)

You can access Dell Support through the following websites and e-mail addresses:

Dell Support websites

- **support.dell.com**
- **support.jp.dell.com** (Japan only)
- **support.euro.dell.com** (Europe only)

Dell Support e-mail addresses

- **mobile_support@us.dell.com**
- **support@us.dell.com**
- **la-techsupport@dell.com** (Latin America and Caribbean countries only)
- **apsupport@dell.com** (Asian/Pacific countries only)

Dell Marketing and Sales e-mail addresses

- **apmarketing@dell.com** (Asian/Pacific countries only)
- **sales_canada@dell.com** (Canada only)

Anonymous file transfer protocol (FTP)

- **ftp.dell.com**

Log in as user: *anonymous*, and use your e-mail address as your password.

AutoTech Service

Dell's automated support service—AutoTech—provides recorded answers to the questions

most frequently asked by Dell customers about their portable and desktop computers.

When you call AutoTech, use your touch-tone telephone to select the subjects that correspond to your questions. For instructions on accessing the telephone number to call your region, see “Contacting Dell” on page 52.

Automated Order-Status Service

To check on the status of any Dell products that you have ordered, you can go to **support.dell.com**, or you can call the automated order-status service. A recording prompts you for the information needed to locate and report on your order. For the telephone number to call your region, see “Contacting Dell” on page 52 for problems with your order.

If you have a problem with your order, such as missing parts, wrong parts, or incorrect billing, contact Dell for customer assistance. Have your invoice or packing slip handy when you call.

Getting Help

For the telephone number to call for your region, see “Contacting Dell” on page 52.

Product Information


If you need information about additional products available from Dell, or if you would like to place an order, visit the Dell website at **www.dell.com**. For the telephone number to call for your region or to speak to a sales specialist, see “Contacting Dell” on page 52.

Returning Items for Repair Under Warranty or for Credit

Prepare all items being returned, whether for repair or credit, as follows:

1. Call Dell to obtain a Return Material Authorization Number, and write it clearly and prominently on the outside of the box.
2. For the telephone number to call for your region, see “Contacting Dell” on page 52.
3. Include a copy of the invoice and a letter describing the reason for the return.
4. Include a copy of the Diagnostics Checklist (see “Diagnostic Checklist” on page 51), indicating the tests that you have run and any error messages reported by the Dell Diagnostics (see “Dell Diagnostics” on page 39).
5. Include any accessories that belong with the item(s) being returned (power cables, software, guides, and so on) if the return is for credit.
6. Pack the equipment to be returned in the original (or equivalent) packing materials.
7. You are responsible for paying shipping expenses. You are also responsible for insuring any product returned, and you assume the risk of loss during shipment to Dell. Collect On Delivery (C.O.D.) packages are not accepted.
8. Returns that are missing any of the preceding requirements will be refused at Dell’s receiving dock and returned to you.

Before You Call

 **NOTE:** Have your Express Service Code ready when you call. The code helps Dell's automated-support telephone system direct your call more efficiently. You may also be asked for your Service Tag (located on the back or bottom of your computer).

Remember to fill out the following Diagnostics Checklist. If possible, turn on your computer before you call Dell for assistance and call from a telephone at or near the computer. You may be asked to type some commands at the keyboard, relay detailed information during operations, or try other troubleshooting steps possible only at the computer itself. Ensure that the computer documentation is available.

Diagnostic Checklist

- Name:
- Date:
- Address:
- Phone number:
- Service Tag (bar code on the back or bottom of the computer):
- Express Service Code:
- Return Material Authorization Number (if provided by Dell support technician):
- Operating system and version:
- Devices:
- Expansion cards:
- Are you connected to a network? Yes /No
- Network, version, and network adapter:
- Programs and versions:


Getting Help

See your operating system documentation to determine the contents of the computer's start-up files. If the computer is connected to a printer, print each file. Otherwise, record the contents of each file before calling Dell.

- Error message, beep code, or diagnostic code:
- Description of problem and troubleshooting procedures you performed:

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area.

To contact Dell for sales, technical support, or customer service issues:

1. Visit **support.dell.com**.
2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
3. Click **Contact Us** on the left side of the page.
4. Select the appropriate service or support link based on your need.
5. Choose the method of contacting Dell that is convenient for you.

Finding More Information and Resources

If you need to:

reinstall your operating system.

run a diagnostic program for your computer, reinstall notebook system software, or update drivers for your computer, and readme files.

learn more about your operating system, maintaining peripherals, RAID, Internet, Bluetooth[®], networking, and e-mail.

upgrade your computer with new or additional memory, or a new hard drive.

reinstall or replace a worn or defective part.

See:

the Operating System media.

the *Drivers and Utilities* media.



NOTE: Drivers and documentation updates can be found on the Dell™ Support website at support.dell.com.

the *Dell Technology Guide* installed on your hard drive.

the *Service Manual* on the Dell Support website at support.dell.com



NOTE: In some countries, opening and replacing parts of your computer may void your warranty. Check your warranty and return policies before working inside your computer.

Finding More Information and Resources

If you need to:

find safety best practices information for your computer

review Warranty information, Terms and Conditions (U.S. only), Safety instructions, Regulatory information, Ergonomics information, and End User License Agreement.

find your Service tag/Express Service Code— You must use the service tag to identify your computer on **support.dell.com** or to contact technical support.

find drivers and downloads.

access technical support and product help.

check on your order status for new purchases.

find solutions and answers to common questions.

locate information for last-minute updates about technical changes to your computer or advanced technical-reference material for technicians or experienced users.

See:

the safety and regulatory documents that shipped with your computer and also see the Regulatory Compliance Homepage at **www.dell.com/regulatory_compliance**.

the back or bottom of your computer.



the Dell™ Support website at **support.dell.com**.

Basic Specifications

System Model

Dell Studio 1536/1537

This section provides basic information that you may need when setting up, updating drivers for, and upgrading your computer.

-  **NOTE:** Offerings may vary by region. For more information regarding the configuration of your computer, click **Start**  → **Help and Support** and select the option to view information about your computer.

Processor

Studio 1536

Type

- AMD® Sempron™ Processor
- AMD® Athlon™ Dual Core Processor
- AMD® Turion™ Dual Core Processor
- AMD® Turion™ Ultra Dual Core Processor

L2 cache

512 KB (AMD Sempron)
1 MB (AMD Athlon, AMD Turion)
2 MB (AMD Turion Ultra)

Processor

Studio 1537

TypeIntel® Core™ 2 Duo
ProcessorIntel® Pentium® Dual-Core
ProcessorIntel® Celeron® Dual-Core
Processor

Intel® Celeron® Processor

L1 cache

L2 cache512 KB (1 MB
(Intel Pentium,
Intel Celeron)2 MB or 3 MB
(Intel Core 2
Duo)6 MB (Intel Core
2 Duo)64 KB (Intel - 32
KB per core)
256 KB (AMD -
128 KB per core)**Processor**

External bus frequency

Up to 1800 MHz
(Studio 1536)Up to 1066 MHz
(Studio 1537)**ExpressCard**ExpressCard
controllerAMD M780G (Studio 1536)
Intel ICH9M (Studio 1537)ExpressCard
connectorone ExpressCard slot
(54 mm)

Cards supported


ExpressCard/34 (34 mm)
ExpressCard/54 (54 mm)
1.5 V and 3.3 VExpressCard
connector size

26 pins

Basic Specifications

Memory

| | |
|----------------|---------------------------------------|
| Connectors | two user-accessible SODIMM connectors |
| Capacities | 512 MB, 1 GB, and 2 GB |
| Memory type | 800 MHz SODIMM DDR2 |
| Minimum Memory | 512 MB (single channel) |
| Maximum Memory | 4 GB (dual channel 2G x2) |

 **NOTE:** For instructions on upgrading your memory, see the *Service Manual* on the Dell Support website at support.dell.com.

Computer Information

| | |
|-----------------------------|--|
| System Chipset | RS780M + SB700 (Studio 1536) Intel GM/PM 45 + ICH9M (Studio 1537) |
| Data bus width | 64 bits |
| DRAM bus width | dual channel (2) 64-bit buses |
| Processor address bus width | 32 bits |
| Flash EPROM | 2 MB |
| Graphics bus | PCI-E X16 |
| PCI bus | 32 bits |

Communications

| | |
|------------------|--|
| Modem type | External V.92 56K USB Modem |
| Modem controller | Hardware Modem |
| Modem interface | Universal Serial Bus (USB) |
| Network adapter | 10/100/1000 Ethernet LAN on system board |
| Wireless | internal WLAN (half-size Mini-Card), WWAN, Mini-Card with Bluetooth® wireless technology WWAN ExpressCard Bluetooth® wireless technology WiMax/Wifi Link half mini-card |

Video**Discrete**

| | |
|------------------|-----------------------------|
| Video type | integrated on system board |
| video controller | ATI Mobility Radeon HD 3450 |
| video memory | GDDR2 256MB |

UMA

| | |
|------------------|---|
| Video type | integrated on system board |
| Video controller | Mobile Intel GMA 4500MHD, ATI Radeon™ HD 3200 Graphics |
| video memory | Intel: Up to 358 MB of shared memory AMD: Up to 256 MB of shared memory (32 MB dedicated local frame buffer) |

Basic Specifications

Video

| | |
|---------------|----------|
| LCD interface | LVDS |
| TV support | HDMI 1.2 |

Audio

| | |
|--------------------|---|
| Audio type | IDT 92HD73C High Definition Audio codec |
| Audio controller | 5.1 channel High Definition Audio |
| Stereo conversion | 24-bit (analog-to-digital and digital-to-analog) |
| Internal Interface | Intel High Definition Audio |
| External Interface | microphone-in connector, stereo headphones/speakers connector |
| Speaker | two 4-ohm speakers |

Audio

| | |
|----------------------------|--------------------------------------|
| Internal speaker amplifier | 2 Watt per channel into 4 ohms |
| Volume controls | program menus, media control buttons |

Ports and Connectors

| | |
|-----------------|---|
| Audio | microphone connector, two stereo headphone/speakers connector |
| IEEE 1394a | 4-pin serial connector (optional) |
| Consumer IR | sensor compatible with Philips RC6 (receive only) |
| Mini-Card | one Type IIIA Mini Card slots, one half-size Mini Card slot |
| Network adapter | RJ-45 port |

Ports and Connectors

| | |
|-------|--|
| eSATA | one seven-pin/four-pin eSATA/USB combo connector |
| USB | four 4-pin USB 2.0-compliant connectors |
| Video | 15-hole connector |
| HDMI | 19 pin |

Display

| | |
|-----------------|---|
| Type (TrueLife) | 15.4-inch WLED WXGA TL 15.4-inch WLED WXGA+ TL 15.4-inch CCFL WUGA TL |
|-----------------|---|

Dimensions:

| | |
|--------|---------------------|
| Height | 207 mm (8.14 in) |
| Width | 331.2 mm (13.03 in) |

Display

| | |
|------------------------|---|
| Diagonal | 391.2 mm (15.4 in) |
| Maximum resolution | |
| WXGA with TrueLife | 1280 x 800 |
| WXGA+ with TrueLife | 1440 x 900 at 262 K colors |
| WUXGA with TrueLife | 1600 x 1200 at 262 K colors |
| Refresh rate | 60 Hz |
| Operating angle | 0° (closed) to 140° |
| <i>Viewing Angles:</i> | |
| Horizontal | ±40° (WXGA with TrueLife) ±55° (WXGA+ with TrueLife) ±55° (WUXGA with TrueLife) |

Basic Specifications

Display

| | |
|---------------------|--|
| Vertical | +15°/–30° (WXGA with TrueLife) ±45° (WXGA+ with TrueLife) ±45° (WUXGA with TrueLife) |
| Pixel pitch | |
| WXGA with TrueLife | 0.258 mm |
| WXGA+ with TrueLife | 0.2304 mm |
| WUXGA with TrueLife | 0.1725 mm |
| Controls | brightness can be controlled through keyboard shortcuts (see <i>Dell Technology Guide</i> for more information.) |

Keyboard

| | |
|----------------|---|
| Number of keys | 86 (U.S. and Canada); 102 (Europe); 105 (Japan); 104 (Brazil) |
| Layout | QWERTY/AZERTY/Kanji |

Camera (optional)

| | |
|------------------------|---------------------------------------|
| Pixel | 2.0 megapixel |
| Video resolution | 320x240 ~1600x1200 (640x480 at 30fps) |
| Diagonal viewing angle | 66° |

Basic Specifications

Touch pad

X/Y position resolution (graphics table mode) 240 cpi

Size:

Width 73.09 mm (2.87-in) sensor-active area

Height 40.09 mm (1.57-in) rectangle

Battery

Type 4-cell/6-cell/9-cell "smart" lithium ion

Depth 48.3 mm (1.9 inches) (4/6/9 cell)

Height 20.4 mm (0.8 in) (4/6 cell)
37.8 mm (1.5 in) (9 cell)

Battery

Width 206.6 mm (8.13 in) (4/6 cell)
284.9 mm (11.2 in) (9 cell)

Weight 0.24 kg (0.54 lb) (4 cell)
0.34 kg (0.75 lb) (6 cell)
0.5 kg (1.1 lb) (9 cell)

Voltage 11.1 VDC (6/9 cell)
14.8 VDC (4 cell)

Charge time (approximate): 4 hours

Computer off

Basic Specifications

Battery

| | |
|---------------------------|---|
| Operating time | Battery operating time varies depending on operating conditions and can be significantly reduced under certain power-intensive conditions. <i>See Dell Technology Guide for more information..</i> |
| Life span (approximate) | 300 discharge/charge cycles |
| <i>Temperature range:</i> | |
| Operating | 0° to 35°C (32° to 95°F) |
| Storage | -40° to 65°C (-40° to 149°F) |
| Coin-cell battery | CR-2032 |

AC Adapter

| | |
|-------------------------|---|
| Input voltage | 100–240 VAC |
| Input current (maximum) | 1.5 A |
| Input frequency | 50–60 Hz |
| Output power | 65 W or 90 W |
| Output current (90 W) | 5.62 A (maximum at 4-second pulse) 4.62 A (continuous) |
| Output current (65 W) | 4.34 A (maximum at 4-second pulse) 3.34 A (continuous) |
| Rated output voltage | 19.5 +/- 1 VDC |
| <i>Dimensions:</i> | |
| 65 W (E-Series) | |
| Height | 16 mm (0.6 in) |

Basic Specifications

AC Adapter

| | |
|----------------------|------------------------------|
| Width | 66 mm (2.6 in) |
| Depth | 127 mm (5.0 in) |
| Weight (with cables) | 0.29 kg (0.64 lb) |
| 90 W (E-Series) | |
| Height | 16 mm (0.6 in) |
| Width | 70 mm (2.8 in) |
| Depth | 147 mm (5.8 in) |
| Weight (with cables) | 0.345 kg (0.76 lb) |
| Temperature ranges: | |
| Operating | 0° to 35°C (32° to 95°F) |
| Storage | -40° to 65°C (-40° to 149°F) |

Physical

| | |
|-------------------------------------|--|
| Height | 25.3 mm to 38 mm (1.0 in to 1.5 in) |
| Width | 355.6 mm (14.0 in) |
| Depth | 261.5 mm (10.30 in) |
| Weight (with 4-cell battery): | |
| Configurable to less than | 2.68 kg (5.91 lb) |
| <i>Relative humidity (maximum):</i> | |
| Operating | 10% to 90% (noncondensing) |
| Storage | 5% to 95% (noncondensing) |

Basic Specifications

Physical

Maximum vibration (using a random-vibration spectrum that simulates user environment):

Operating 0.66 GRMS

Storage 1.3 GRMS

Maximum shock (measured with hard drive in head-parked position and a 2-ms half-sine pulse):

Operating 110 G

Storage 163 G

Altitude (maximum):

Operating -15.2 to 3048 m
 (-50 to 10,000 ft)

Physical

Storage -15.2 to 10,668 m
 (-50 to 35,000 ft)

Airborne contaminant level G2 or lower
 as defined by
 ISA-S71.04-1985

Appendix

Macrovision Product Notice

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Index

A

- AC adapter
 - size and weight **64, 65**
- airflow, allowing **5**
- AutoTech **49**

B

- backups
 - creating **31**

C

- calling Dell **51**
- CDs, playing and creating **30**
- chipset **58**
- computer capabilities **30**
- computer, setting up **5**

- connect(ing)
 - to the Internet **10**
- conserving energy **31**
- Contacting Dell online **52**
- customer service **48**
- customizing
 - your desktop **30**
 - your energy settings **31**

D

- damage, avoiding **5**
- data, backing up **31**
- DellConnect **48**
- Dell Diagnostics **39**
- Dell Factory Image Restore **42**

Dell Support Center **37**
Dell support website **55**
Dell Technology Guide
 for further information **54**
device status lights **14**
Diagnostic Checklist **51**
disc drive
 supported disc sizes **29**
discs
 ejecting **29**
 using **29**
drivers and downloads **55**
DVDs, playing and creating **30**

E

email addresses
 for technical support **49**

energy
 conserving **31**
expansion bus **59**

F

finding more information **54**
FTP login, anonymous **49**

H

hardware problems
 diagnosing **39**
Hardware Troubleshooter **39**
help
 getting assistance and support **47**
horizontal and vertical stand options **6**

I

installing the stand **6**
Internet connection **10**

Index

ISP

Internet Service Provider **10**

M

memory problems

solving **34**

memory support **58**

Microsoft™ Windows Vista® **10**

N

network connection

fixing **32**

network speed

testing **32**

O

order status **49**

70

P

power problems, solving **33**

power strips, using **6**

problems, solving **32**

processor **56**

products

information and purchasing **50**

R

reinstalling Windows **42**

resources, finding more **54**

restoring factory image **43**

S

setup, before you begin **5**

shipping products

for return or repair **50**

software features **30**

software problems **35**

solving problems **32**
specifications **56**
support email addresses **49**
support sites
 worldwide **48**
System Messages **37**
system reinstall options **42**
System Restore **42**

T

technical support **48**

V

ventilation, ensuring **5**

W

warranty returns **50**
Windows, reinstalling **42**

Windows Vista®
 Program Compatibility Wizard **36**
 reinstalling **46**
 setup **10**
wired network
 network cable, connecting **8**
wireless network connection **32**
wireless switch **7, 14, 32**








Printed in the U.S.A.

www.dell.com | support.dell.com



 0F955HA00





Printed in Malaysia.

www.dell.com | support.dell.com



0F955HA00






Printed in China.
Printed on recycled paper.

www.dell.com | support.dell.com



 0F955HA00





Printed in Brazil.

www.dell.com | support.dell.com



0F955HA00





Printed in Ireland.

www.dell.com | support.dell.com



0F955HA00

